

# INSIGNIA™

24"/32" LCD TV/DVD Combo

## QUICK SETUP GUIDE

NS-24LD120A13/NS-32LD120A13

### Thank You


for purchasing this fine Insignia television and DVD player combo. We hope you enjoy the quality and reliability of this product for years to come.



Remote control and  
2 AAA batteries



TV stand

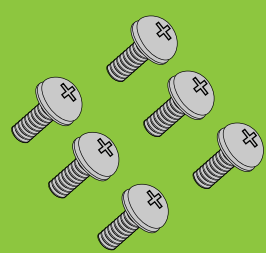

32" model

### WE ARE GOING GREEN!

A copy of your *User Guide* is not provided in the box but is available online.

Go to [www.insigniaproducts.com](http://www.insigniaproducts.com), click **Support & Service**, enter your model number in the **Product Search** field, then click **Search**.



### Front features




Power indicator

Remote control sensor


### Installing the stand (24")

- 1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- 2 Align the stand with the stand column, then rotate the stand in the direction of the arrow until you hear it lock into place.

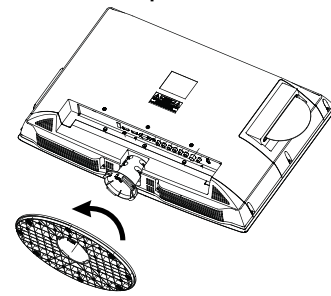

### Installing a wall-mount bracket (24")


- 1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- 2 Press and hold the **PUSH** button, then rotate the stand to remove it.
- 3 Remove the six screws that secure the stand column, then remove the stand column.

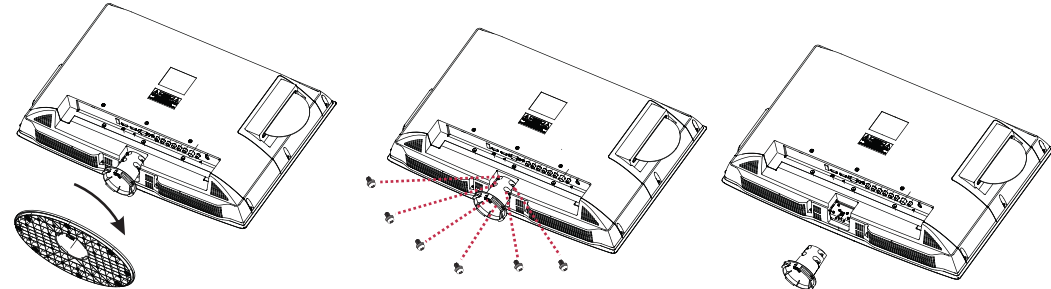

- 4 Attach the wall-mount bracket to your TV/DVD combo using the mounting holes on the back of your TV/DVD combo. See the instructions that came with the wall-mount bracket for information about how to correctly hang your TV/DVD combo.


### Installing the stand (32")

- 1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- 2 Secure the stand to the TV stand column using the six provided screws.

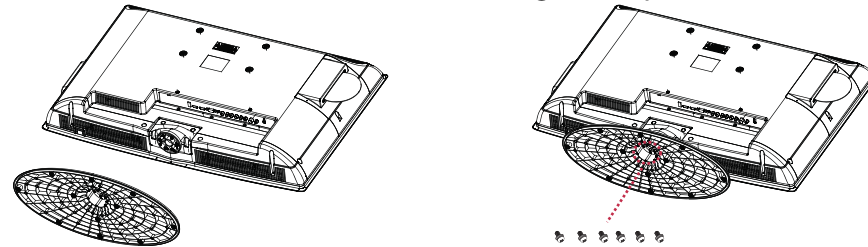

### Installing a wall-mount bracket (32")

- 1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- 2 Remove the two screws that secure the stand column to your TV/DVD combo then remove the stand column.

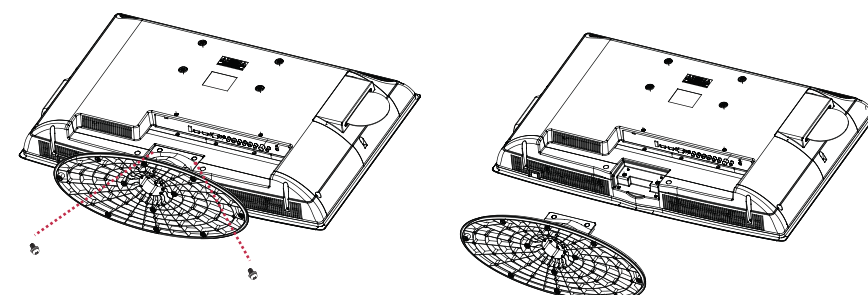

- 3 Attach the wall-mount bracket to your TV/DVD combo using the mounting holes on the back of your TV/DVD combo. See the instructions that came with the wall-mount bracket for information about how to correctly hang your TV/DVD combo.

### Warning

This apparatus is intended to be supported by a UL Listed wall mount bracket.

### Identifying cables


Your TV has several connection types for connecting devices. For the best video quality, connect a device to the best available connection.

Connection type	Video quality	Cable connector
HDMI video/audio	Best	HDMI cable
OR		
Component video and analog audio	Better	Component video cable and analog audio cable
OR		
Composite video and analog audio	Good	Composite video cable and analog audio cable


You can use an HDMI jack to connect a DVI device to your TV. You need to attach an HDMI-to-DVI adapter to the end of the HDMI cable that connects to the DVI device's jack.

### Connecting a DVD or Blu-ray player, cable box, satellite receiver, camcorder, or game station


Using an HDMI cable (best)

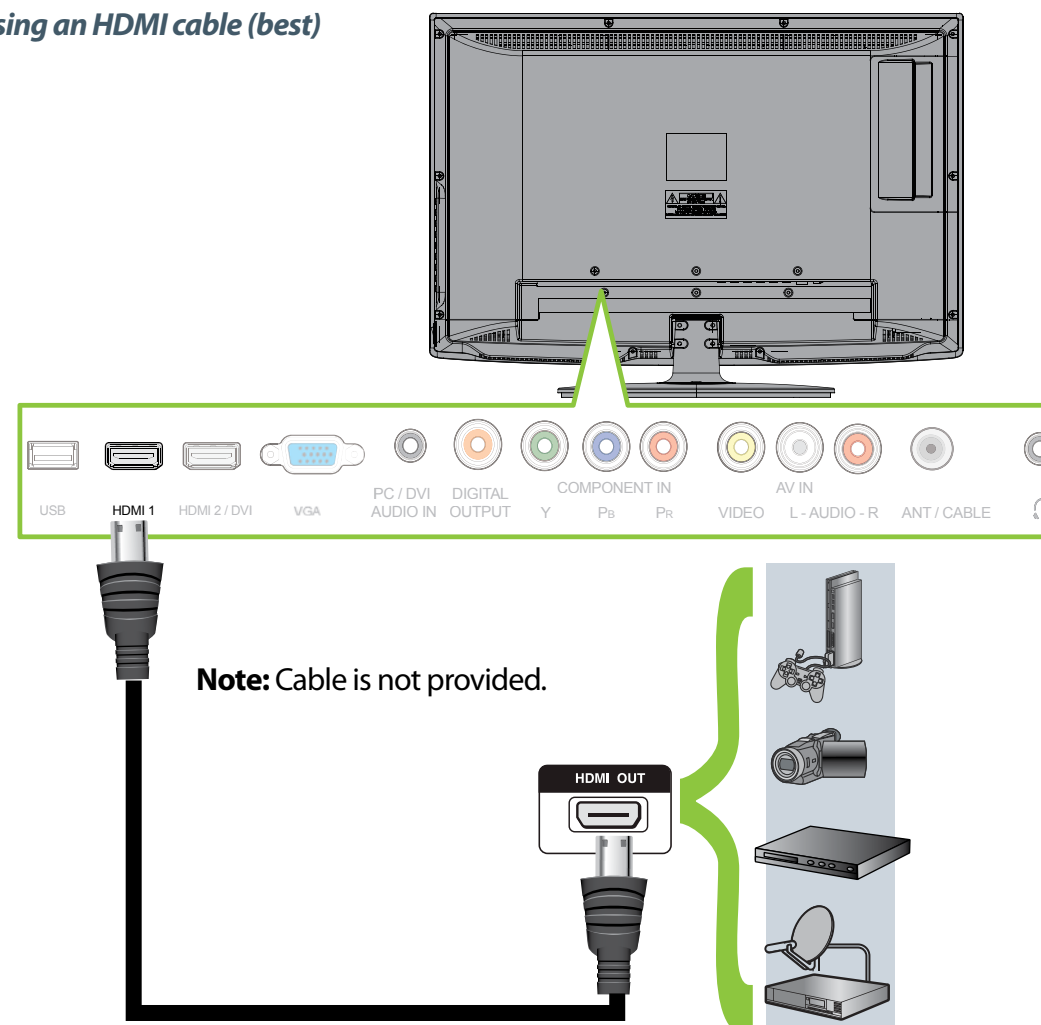

Using component cables (better)

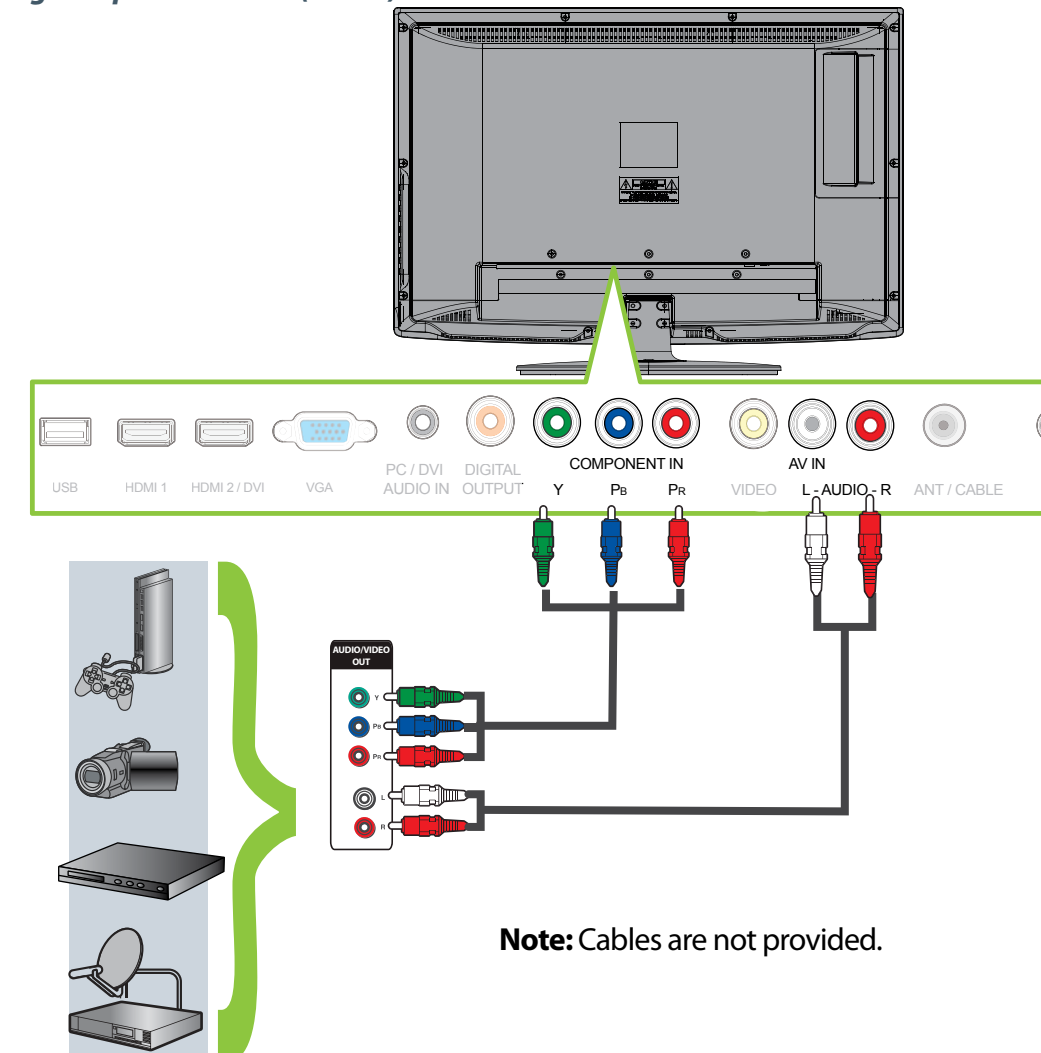


Using composite cable (good)

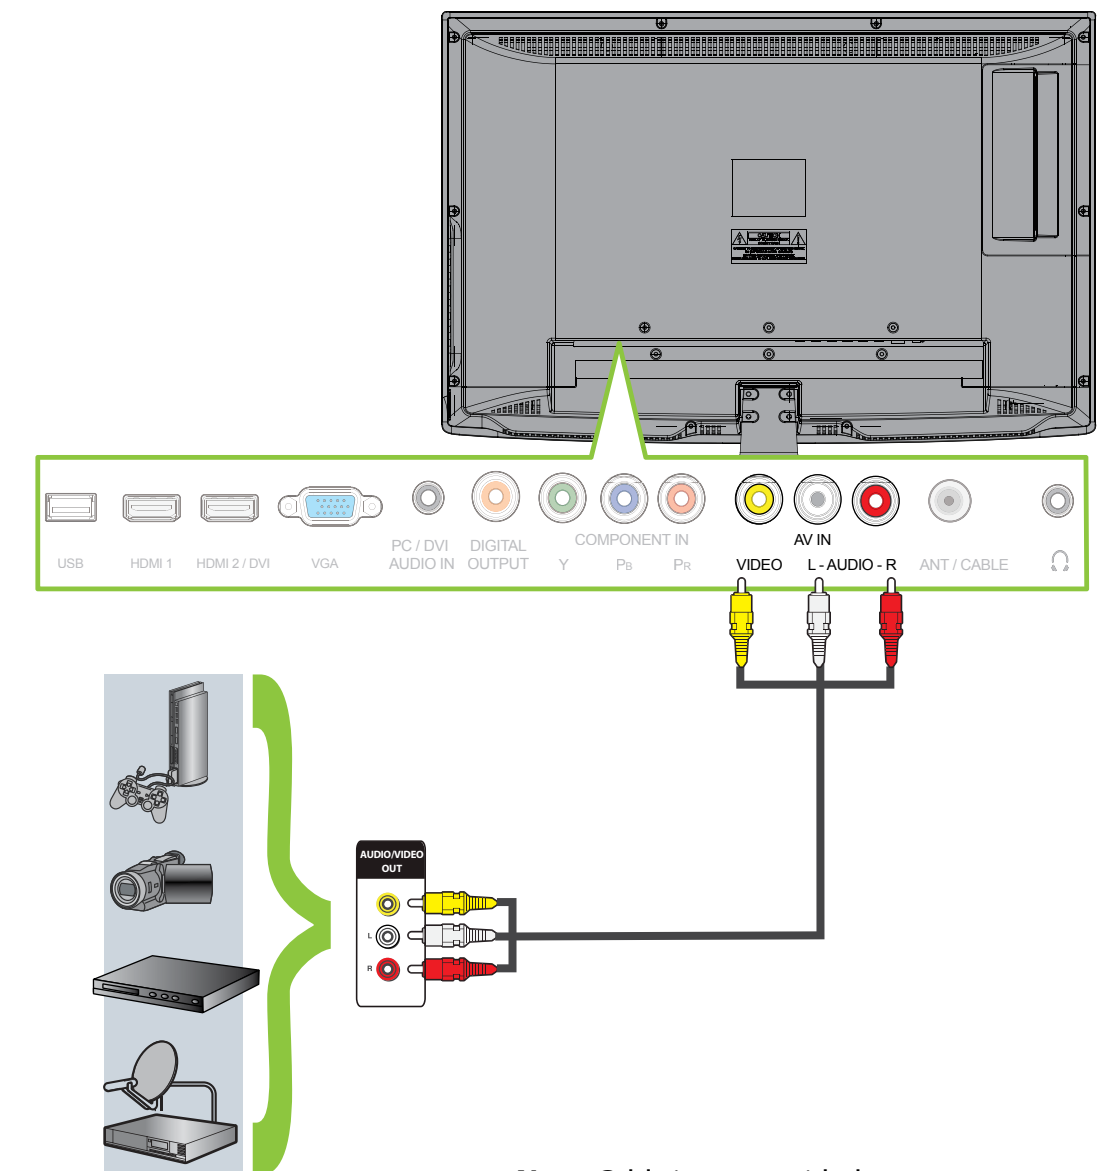

Note: Cable is not provided.

### Connecting an antenna/cable wall jack

Connect a coaxial cable to the **ANT/CABLE IN** jack on the back of your TV/DVD combo and to the antenna/cable wall jack.

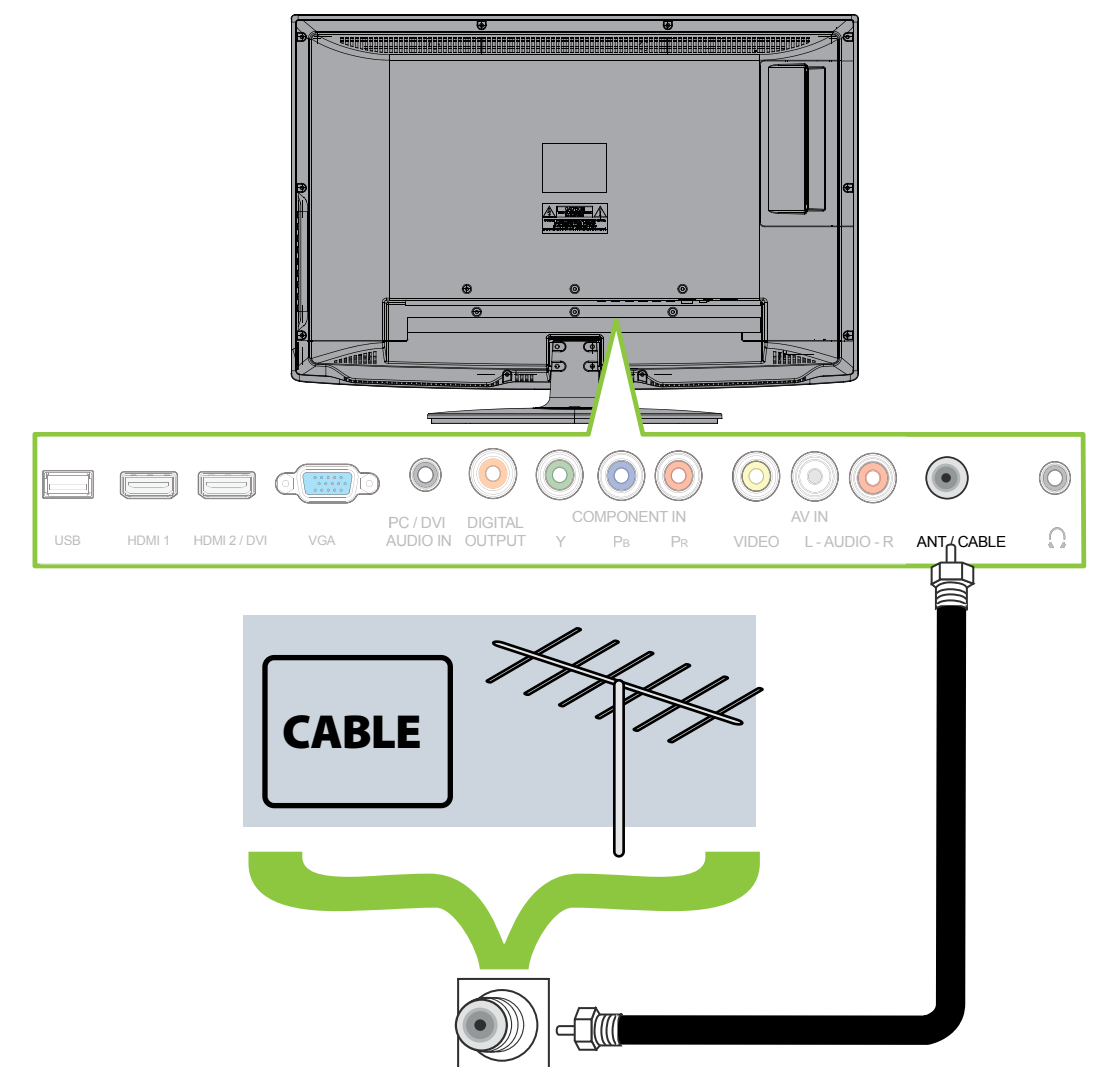


Note: Cable is not provided.



# 24"/32" LCD TV/DVD Combo | QUICK SETUP GUIDE | NS-24LD120A13/NS-32LD120A13


## Connecting a home theater system

Using digital audio

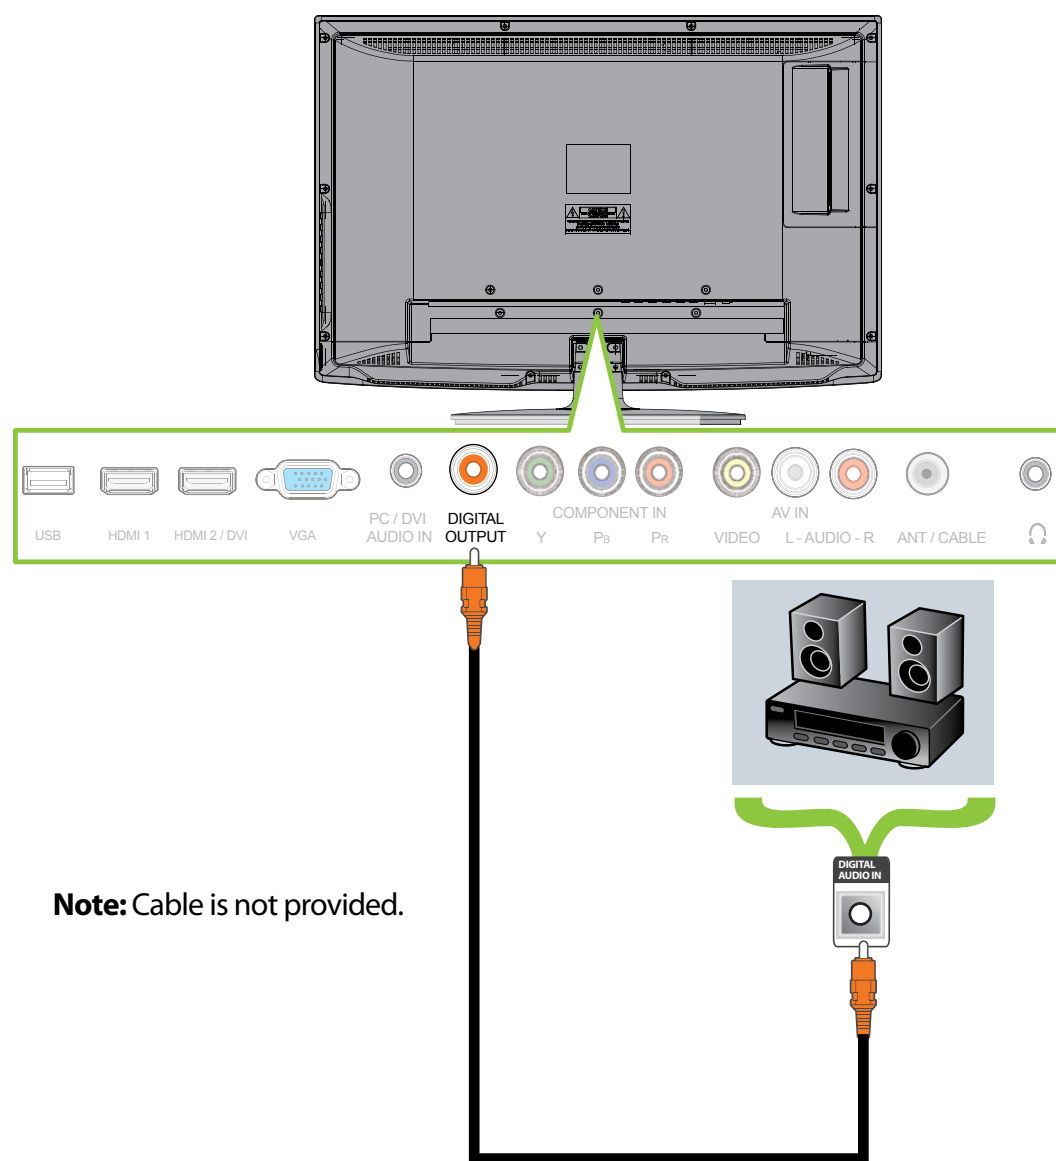


Note: Cable is not provided.

## Connecting a home theater system with multiple devices

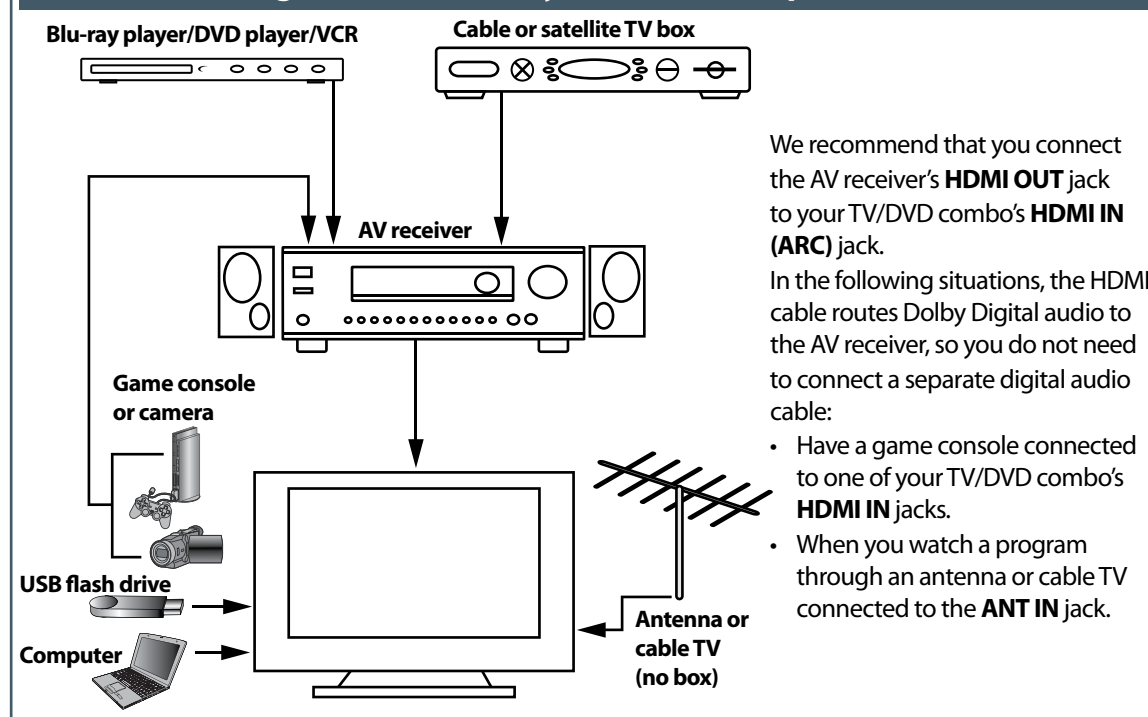


## Connecting power

Plug the AC power cord on the back of your TV/DVD combo's into a power outlet.

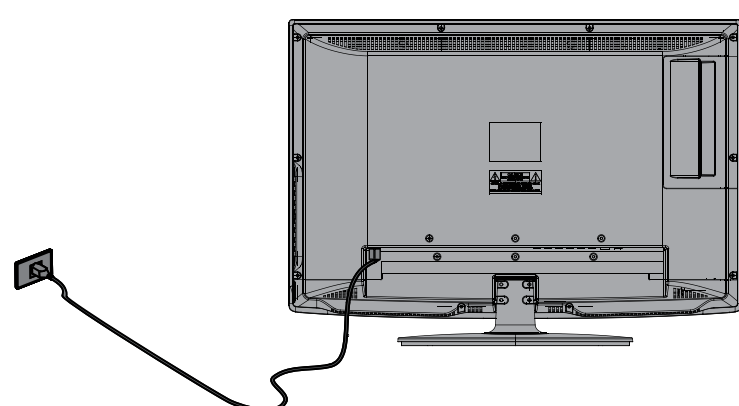

## Setting up and using your remote control

- Press the release button on the back of the remote to remove the battery compartment cover.
- Insert two AAA batteries into the battery compartment. Make sure that the + and - symbols on the batteries match the + and - symbols in the battery compartment.
- Replace the cover.

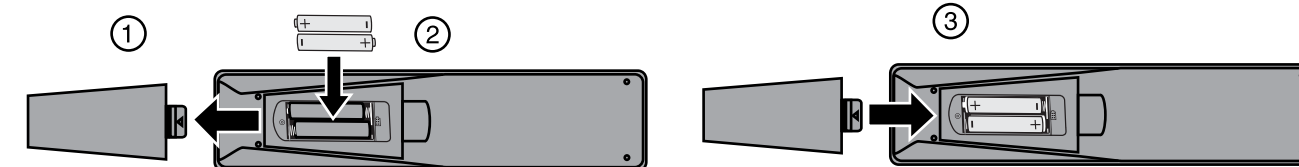

### Aspect ratio options

**Normal:** Displays the original 4:3 aspect ratio with black bars vertical on the left and right hand side of the screen.

**Zoom:** Expands the image to fill the screen. The top and bottom of the image may be cropped.

**Wide:** Use this option to view content recorded in a 16:9 (wide-screen) aspect ratio.

**Cinema:** Stretches the image at the edges, but keeps a clear image in the center.

**Auto:** Automatically adjusts the image based on the screen size and the TV program. **Note:** Auto Zoom in the CHANNELS menu is set to **On**.

**Power**  
Turns your TV/DVD combo on or off.

**Numbers**  
Enter channel numbers.

Enters a digital sub-channel number (e.g. 4.1).

**Quick Launch Inputs**  
Selects another source connected to your TV/DVD combo.

**Volume**  
Changes the volume.

**EXIT**  
Closes the on-screen menu.

**ENTER**  
Confirms selections or changes.

**MTS/SAP**  
Cycles through mono, stereo, and secondary audio for analog programs.

**HOME**  
Opens the on-screen menu.

**CCD**  
Turns closed captioning on or off.

**PICTURE**  
Selects the video mode.

**AUDIO**  
Selects the audio mode.

**Menu**  
Opens the DVD menu.

**Setup**  
DVD system setup.

**Navigation buttons**  
Navigates in DVD playback.

**INPUT**  
Opens the **INPUT SOURCE** list.

**RECALL**  
Returns to the previous channel.

**MUTE**  
Mutes the sound.

**Channel**  
Changes the TV channels.

**TV-MENU**  
Opens the on-screen menu.

**Arrows**  
Navigate in on-screen menus.

**FAVORITE**  
Opens the Favorite Channel List.

**INFO**  
Opens a TV status banner.

**ZOOM**  
Changes how the picture displays on the screen.

**CH-LIST**  
Opens the channel list.

**SLEEP**  
Sets the sleep timer.

**Subtitle**  
Selects the DVD subtitle language.

**TOP MENU**  
Opens the DVD title menu.

**Audio**  
Select different audio languages, subject to availability from broadcaster.


## Programming your remote control

To program a universal remote control to work with your new Insignia TV, see the table for common codes. If you have problems programming your remote or need a different remote control code, visit [www.insigniaproducts.com/remotecodes](http://www.insigniaproducts.com/remotecodes) for the latest remote control code information.

Universal remote TV codes												
Universal remote controls				Cable/Satellite/Set-top boxes								
One for All	Philips	RCA	Sony	Cablevision	Charter	Comcast	Cox	Direct TV	Dish Network	Time Warner	Tivo	Verizon
0054	0198, 0490	135	068, 069, 078, 096, 100, 164, 100, 164, 168, 229, 026	068, 069, 078, 096, 100, 164, 168, 229, 026	2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586	10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002	1326, 1463	10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002	720	400, 450, 461, 456, 10463, 1463, 0463	0091	0198, 0490

## Turning on your TV for the first time

- Connect your TV's power cord to a power outlet, then press **Power**. The **Choose Your Menu Language** screen opens.
- Press **▲** or **▼** to highlight the language you want, then press **ENTER**. The **Choose Your Time Setting** screen opens.
- Press **◀** or **▶** to select **Auto** or **Manual**, then press **ENTER**. If you select **Auto**, the date and time are set automatically from a digital TV signal. If you select **Manual**, you can manually set the date and time. Press **ENTER**.
- Press **▲** or **▼** to highlight **Home Mode** or **Retail Mode**, then press **ENTER**. If you select **Retail Mode**, a message asks you to confirm your selection. Select **Yes** or **No**. Retail mode is not an energy-saving mode.
- Press **▲** or **▼** to highlight **Antenna**, **Cable**, or **Satellite Box**, then press **ENTER**.
  - If you select **Antenna**, your TV scans for available channels. The scan may take several minutes.
  - If you select **Cable**, a message asks if you have a cable box.
    - Select **No** if no cable box is connected. Your TV scans for available channels. The scan may take several minutes.
    - Select **Yes** if a cable box is connected. A message asks how you connected the cable box to your TV:
      - Select **AV**, **Component**, or **HDMI** if you connected a cable box to your TV using one of these cables. Read the message, then press **ENTER** to close the wizard.
      - Select **Coaxial** if you connected a cable box to your TV using a coaxial cable. Read the message, then press **ENTER** to start the channel scan (VHF channels only).
  - If you select **Satellite Box**, a message asks how you connected the satellite box to your TV:
    - Select **AV**, **Component**, or **HDMI** if you connected a satellite box to your TV using one of these cables. Read the message, then press **ENTER** to close the wizard.
    - Select **Coaxial** if you connected a satellite box to your TV using a coaxial cable. Read the message, then press **ENTER** to start the channel scan (VHF channels only).

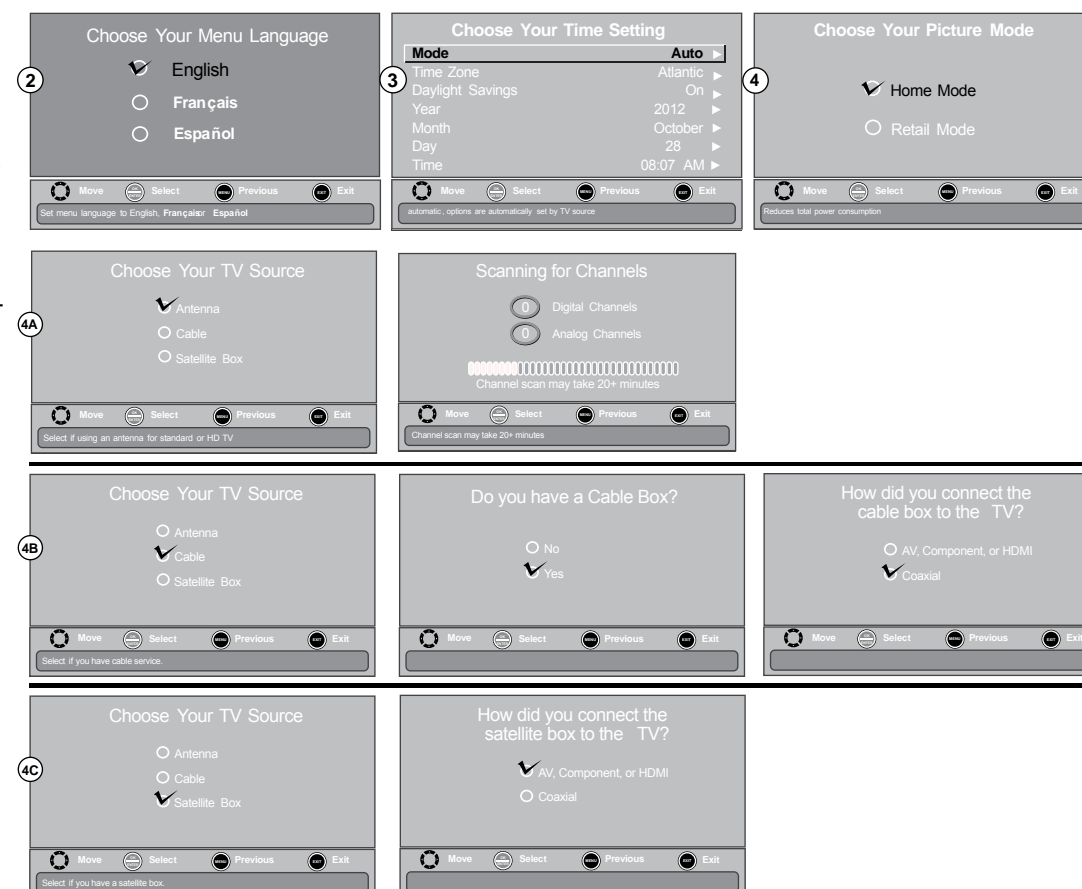

# INSIGNIA™

## One-year limited warranty

See your online *User Guide* or visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

## Need additional help?

See your online *User Guide*! This comprehensive guide includes everything from basic how-to steps to more advanced features.

Check out our **online community forum** at [www.insigniaproducts.com](http://www.insigniaproducts.com) for helpful information from other Insignia TV owners.

## We're here for you

[www.insigniaproducts.com](http://www.insigniaproducts.com)

For customer service, call:

**877-467-4289 (U.S./Canada markets)**

Distributed by Best Buy Purchasing, LLC  
7601 Penn Avenue South, Richfield, MN USA 55423-3645

© 2012 BBY Solutions, Inc.  
All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

## WE ARE GOING GREEN!

A copy of your *User Guide* is not provided in the box but is available online.

Go to [www.insigniaproducts.com](http://www.insigniaproducts.com), click **Support & Service**, enter your model number in the **Product Search** field, then click **Search**.

